

# PW-200 Calibration Manual

## Span calibration

\*CAL switch is located underneath of body.

### Span Setting

1. Press “ON/OFF” key while CAL switch is being pressed

ZErO

2. Press “Unit”(Yes) key four times until the scale displays

rEAd

The display will then quickly turn to

FULL

3. Span calibration

Press “Unit”(YES) key, “STABLE” designator will be on

Place the full load (max capacity) on the platter

Press “Unit”(YES) key, “STABLE” designator will be on

Span calibration is finished.

End

tESt

Email: [GoUSApos@gmail.com](mailto:GoUSApos@gmail.com), C Phone:201. 679. 7793

